

BASCO

Buildings Automation Systems

Importer : Ekinler Endüstri San. ve Tic. A.Ş.

Address : İkitelli Organizasyon Sanayi Bölgesi 1.Tümsan Sanayi Sitesi

8.Blok No:22 Başakşehir/İSTANBUL

Tel : +90 212 485 49 58

Fax : +90 212 485 09 57


Web : www.basco.tech

E-mail : info@basco.tech




1 Receiver Features

CE0197

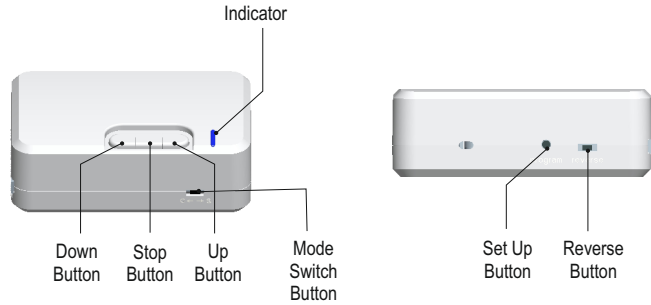


PCR01-000 Button External Receiver

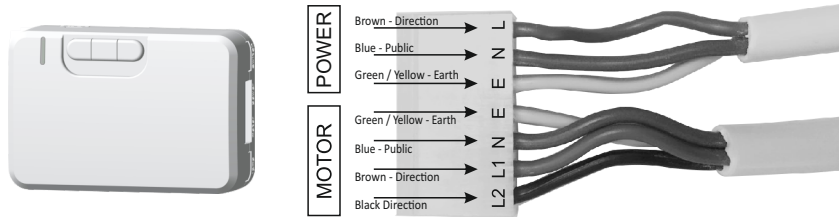

- Can store 20 effective channels, after filled 20 channels, if add new channel, it will cover the 20th channel.
- Operating Voltage : 230 V
- Operating Frequency : 50Hz
- Output Power : 1000W


2 Remote Controller Installation and Adding Instruction

- The interval of each button must within 10 seconds when re-setting all instructions, otherwise the system will restore to previous state

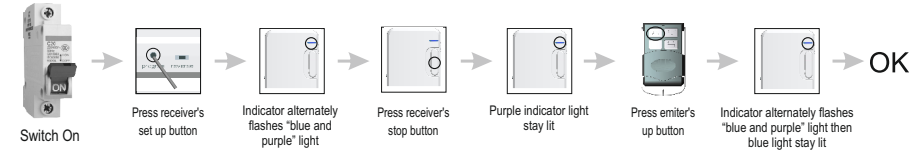


3 Deleting One Remote Controllers

- The interval of each button must within 10 seconds when re-setting all instructions, otherwise the system will restore to previous state

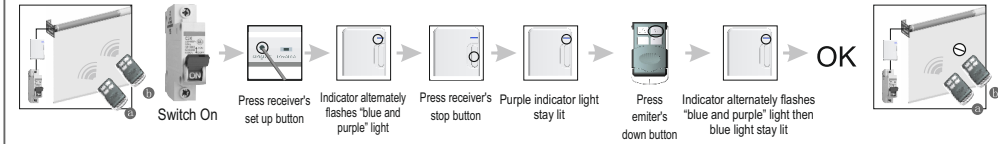

4 Dot-Move Setting Instruction

- Repeat this setting, the dot-move function is cancelled

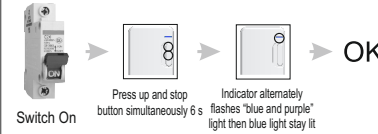


5 Deleting All Remote Controllers

- The interval of each button must within 10 seconds when re-setting all instructions, otherwise the system will restore to previous state



6 Changing Direction Instruction

- The interval of each button must within 10 seconds when re-setting all instructions, otherwise the system will restore to previous state

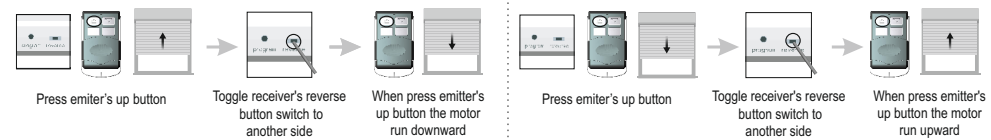

7 Safe Mode Setting Instruction

- The interval of each button must within 10 seconds when re-setting all instructions, otherwise the system will restore to previous state

